



Instructions

- Open air nozzle and pinch down on it as you are inflating your Blo-Bot. Repeat this process until all four sections are completely inflated. Be careful not to over-inflate.
- Install four D size batteries in the base, and one 9 volt battery in the controller.
- Place your inflatable robot on the base.
- Move switch on base to on, then use one or two switches (or buttons) via the handset to spin and/or go forward.
- When you finish operating your Blo-Bot, set both ON/OFF switches to OFF. This saves battery power.
- If your Blo-Bot moves slowly, or does not move at all, replace the batteries with fresh ones.
- When you're not planning to play with your Blo-Bot for a few days, remove the batteries from the base and controller. Never leave weak or dead batteries in either unit. The batteries may leak damaging chemicals.
- Do not use Your Blo-Bot on a wet floor, mud or sand. Never play in streets with traffic.
- The talking feature has been disabled due to it being very noisy even when not active.
- Use under parental / responsible supervision. Choking hazard. Not for children under 3 years.
- Recommend using with an airbed inflater/deflater. Not supplied. Clean the nozzles with hot soapy water after each use.



Adapted by OneSwitch.org.uk.
Please recycle or return when no longer wanted.