



Do not aim at eyes or face. TO AVOID INJURY: Use only clean tap water.

Water resistant. Do not submerge.

AGES 6+

BATTERY COVER

THUNDERSTORM


TRIGGER

CLIP RELEASE SWITCH

WATER CLIP


ALKALINE BATTERIES REQUIRED


THUNDERSTORM

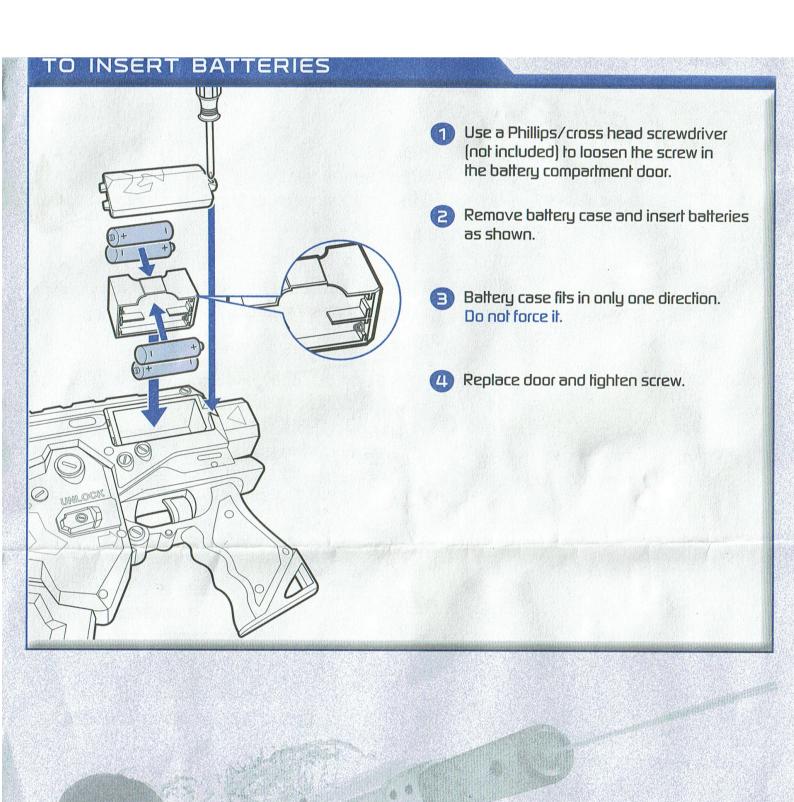

WATER CLIP 10 FL. 02.10.3
DISTANCE 25 FT. 17.6 M.


## TO PLAY

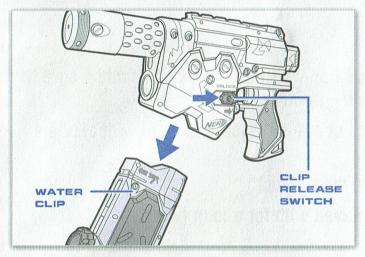

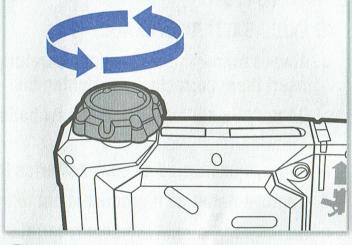


Slide CLIP RELEASE SWITCH backward and pull WATER CLIP out of soaker.




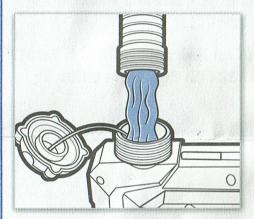


Fill completely with clean, clear tap water.

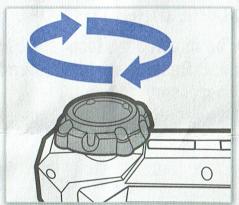

4

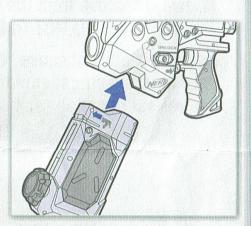

Insert WATER CLIP into soaker with arrow and fill cap pointing forward. WATER CLIP can only attach in one direction.

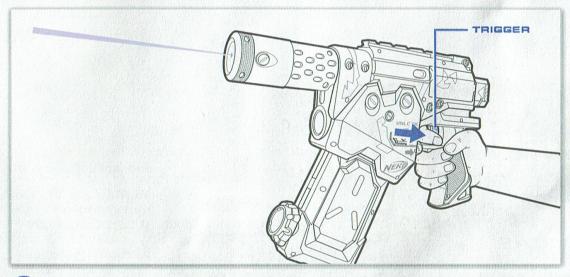


6 Pull TRIGGER to launch water.

## IMPORTANT: BATTERY INFORMATION


## **CAUTION:**

## 1. TO AVOID BATTERY LEAKAGE

- a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
- b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- c. Remove exhausted or dead batteries from the product.
- d. Remove batteries if product is not to be played with for a long time.
- e. Do not short-circuit the supply terminals.
- f. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.
- 2. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

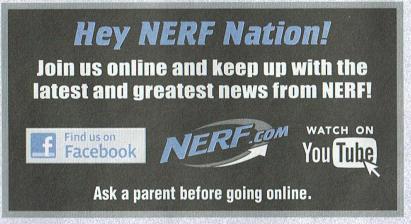

Product and colors may vary.

 

28495



Questions? Call 1-800-327-8264

PN 7296940000